Right choice for ultimate yield

LSIS strives to maximize customers' profit in gratitude of choosing us for your partner.

CC-Link Option User Manual

SV-iS7 Series





- Read this manual carefully before installing, wiring, operating, servicing or inspecting this equipment.
- •Keep this manual within easy reach for quick reference.



Thank you for purchasing iS7 CC-Link option module of LS Variable Frequency Drives!

Safety Instruction

- To prevent injury and danger in advance for safe and correct use of the product, be sure to follow the Safety Instructions.
- The instructions are divided as 'WARNING' and 'CAUTION' which mean as follow.



WARNING This symbol indicates the possibility of death or serious iniurv.

CAUTION This symbol indicates the possibility of injury or damage to property.

•The meaning of each symbol in this manual and on your equipment is as follows.



This is the safety alert symbol.

This is the dangerous voltage alert symbol.

- After reading the manual, keep it in the place that the user always can Contact easily.
- Before you proceed, be sure to read and become familiar with the safety
 precautions at the beginning of this manual. If you have any questions, seek
 expert advice before you proceed. Do not proceed if you are unsure of the safety
 precautions or any procedure.

- Be cautious about dealing with CMOS elements of option module. It can cause malfunction by static electricity.
- Connection changing like communication wire change must be done with power off.

It can cause communication faulty or malfunction.

- Be sure to connect exactly between Inverter and option module. It can cause communication faulty or malfunction.
- Check parameter unit when setting parameter. It can cause communication faulty

Introduction

CC-Link Master can operate the inverter and monitor the state of inverter in CC-Link network through SV-iS7 CC-Link communication option module. SV-iS7 CC-Link provides the version 1.10 of CC-Link.

1. Specification of CC-Link Communication Option Module

Transmission Speed	156k, 625k, 2.5M, 5M, 10Mbps
Station Type	Remote device station
Number of	1 station
Occupied Stations	T Station
Version	V1.10
	$(1 X a) + (2 X b) + (3 X c) + (4 X d) \le 64$
	a: Number of modules occupying 1 station
	b: Number of modules occupying 2 station
	c: Number of modules occupying 3 station
The Number of	d: Number of modules occupying 4 station
Station connected	
	(16 X A) + (54 X B) + (88 X C) ≤ 2304
	A: Number of remote I/O stations Max. 64
	B: Number of remote device stations Max. 42
	C: Number of Local/Intelligent device stations Max. 26
Interface	5 pin pluggable connector
Cabla	CC-Link dedicated cable,
Caple	Compatible dedicated cable with CC-Link Ver 1.10
External Diameter	Less than 8.0 mm
2. Product Comp	oonents

- SV-iS7 CC-Link communication option module	1 ea
- Screw for fixing on the inverter	1 ea

- SV-iS7 CC-Link User Manual 1ea

3. SV-iS7 CC-Link Exterior and Installation

Γ

(1) Outside of the communication option module



(2) Inside of the communication option module



(3) Mounting the communication option module on iS7 inverter



(4) CC-Link signal connector structure and wiring method

① DA (Blue) ②DB (White) ③DG (Yellow) ④SLD (Shielded twisted Cable) ⑤ FG



<Connector Structure>

<Wiring Method>

Signal connector OSADA OS-86-5P must be used for iS7 CC-Link communication option module. (5-Pin connector)

4. Network Connection

Connection terminal of communication cable

No.	Signal	Description	Cable Color
1	DA	Transmitted/Received data	Blue
2	DB	Transmitted/Received data	White
3	DG	Signal ground	Yellow
4	SLD	Shielded cable	Shielded twisted Cable
5	FG	Frame ground	-

<Setting method of terminal resistor>

Γ

 \approx If the iS7 CC-Link communication option module is placed at the end of the network, the last option module must turn On the setting switch of terminal resistor. Terminal resistor is 110 Ω 1/2W.



When the switch of terminal resistor is placed in left side (Off)

 \rightarrow Terminal resistor is not available.

When the switch of terminal resistor is placed in right side (On)

 \rightarrow Terminal resistor is available.

LS 15 | 5

<Hardware Installation>

Warning) Configure the communication network after turn off the power of inverter

Wiring of CC-Link communication cable

Connect the dedicated CC-Link communication cable to terminal block as following procedure.

To reduce the noise, CC-Link communication module at both ends of the network has to be terminated. Turn on the setting switch of terminal resistor on CC-Link communication module.



<Communication Cable Feature>

Г

We recommend the cable as below described cable. If not, we can not guarantee the performance of CC-Link.

Items		Specification	
Туре	Shielded twisted cable note1)		
The number of Cable Core	3		
Conductor Size	20AWG		
Conductor Resistor (20℃)	37.8Ω /	km or less	
Insulation Resistor	10000N	I Ω / km or more	
Withstanding Voltage	DC500	V 1 minute	
Capacitance (1 kHz)	60 nF /	km or less	
Characteristic	1MHz	110 ± 15Ω	
Impedance ^{note2)}	5MHz	110 ± 6Ω	
	DA	Sheath	
Cross Section	DB Shie White Yellow Alumi Tap		
External Diameter	Ground Wire 7 mm	DG	

^{note1)} PVF EV-AMESB [LS cable manufactured] recommended ^{note2)} Measuring Method of Characteristic Impedance

- Cable Length: 100m or more

Measuring method is not designated, but Open/Short method has to measure the characteristic impedance in range within each specified frequency by approximate value which is measured value.

LS 15 | 7

<Maximum Transmission Distance>



5. LED Display

Γ

3 green LEDs and 1 red LED on the CC-Link communication module displays the status of CC-Link communication module. LED is organized as following.

Green	Green	Red	Green
COM	RUN	ERR	CPU
		\bigcirc	\bigcirc

LED	Color	Function	
Name	000	T unction	
		On – Communication transmitting/receiving.	
COM	Green	Off - Communication transmitting/receiving is not established.	
		Check if the communication cable is connected correctly.	
		On – Station ID and Baud Rate is normally set and Refresh data	
		is received normally.	
RUN	Green	Off – CC-Link communication is not established.	
		Check if COM-09(Station ID) and COM-10(Baud rate) is	
		set correctly.	
EDD	Pod	On – CRC Error	
	Reu	Off – Normal State	
		Flickering at the 1 second interval - It means that CC-Link	
		communication module is energized and the status is normal.	
		Off - It means that CC-Link communication module is de-	
		energized or CC-Link communication module has a fault.	
CDU	Green	Flickering at the 200m second interval - It means that the	
CFU		changed value of Station ID and Baudrate is not saved	
		successfully in internal memory of CPU.	
		Flickering at the 2 second interval – It means that the interface	
		communication between CC-Link communication module and	
		inverter has an error.	

LSis 9

6. Trouble Shooting

	LED Display Cause Countermoscure			Countermosouro	
COM	RUN	ERR	CPU	Cause	Countermeasure
				Power supply is	Check if the communication module
OFF	OFF	OFF	OFF	not energized	is installed on the inverter. Check if
				not energized.	the inverter is turned On.
					Check if communication cable and
			Flickering	Abnormal saving	power supply cable is separated.
-	-	-	with 200m	in internal	After the power of inverter is turned
			cycle	memory	Off, and then energize the power of
					inverter.
				Abnormal	Check if communication cable and
				Interface	power supply cable is separated.
			Flickering	communication	After the power of inverter is turned
-	-	-	with 2 s	between	Off, and then energize the power of
				communication	inverter.
				module and	
				inverter	
OFF	OFF	_	Flickering	Communication is	Check if communication cable is
			with 1 s	not established.	connected correctly.
				The value of	Set the value of Station ID and
_	OFF	-	Flickering	StationID and	Baudrate correctly, and then do
	011		with 1 s	Baudrate is not	Comm Update.
				correct.	
				After	Change the value of Station ID and
				Communication	Baudrate to the previous value or
		Flicker	Flickering	module is turned	Do Comm Update to apply the
-	ON	ing	with 1 s	On, the value of	changed value of Station ID and
		ing	with 1.5	Station ID and	Baudrate.
				Baudrate is	
				changed.	
					CRC error is occurred by influenced
ON	ON	Flicker	Flickering	CRC Error	of noise.
		ing	with 1 s	Occurrence	Check if communication cable and
					power supply cable is separated.

7. Quick Communication Start

Г

Install the CC-Link communication module while inverter power supply is turned off. After inverter power supply turns on, check if CNF-30 parameter is 'CC-Link'. Connect to the network with communication cable via CC-Link communication module.

- (1) Set the Station ID of inverter at parameter COM-7 FBus ID.
- (2) Set Baudrate at COM-10 Opt .
- (3) Set to 'Yes' at COM-94 Comm Update.

Check if RUN LED of CC-Link Communication module is turned On. If not, Check if the parameter value of COM-7 and COM-1 of Keypad is correct.

Code	Parameter Name	Initial Value	Range
CNF-30	Option-1 Type	-	-
DRV-06	Cmd Source	Fx/Rx-1	Keypad Fx/Rx-1 Fx/Rx-2 Int. 485 FieldBus PLC
DRV-07	Freq Ref Src	Keypad-1	Keypad-1 Keypad-2 V1 I1 V2 I2 Int. 485 Encoder FieldBus PLC
PRT-12	Lost Cmd Mode	None	None FreeRun Dec Hold Input Hold Output Lost Preset
PRT-13	Lost Cmd Time	1.0sec	0.1~120.0sec
PRT-14	Lost Preset F	0.00Hz	0.00~400.00Hz
COM-06	FBus S/W Ver	_	-
COM-07	FBus ID	1	0~64
COM-09	FBus LED	-	-

8. Keypad Parameter related with CC-Link Communication

Code	Parameter Name	Initial Value	Range
			0 (156k)
			1 (625k)
COM-10	Opt Parameter1	0	2 (2.5M)
			3 (5M)
			4 (10M)
COM-31	Para Status-1		0x0000 ~ 0xFFFF
~COM-38	~ Para Status-8	-	
COM-51	Para Control-1		
~COM-58	~ Para Control-8	-	
0014.04	Comm Update	No	No
00101-94			Yes

(1) Option-1 Type (CNF-30)

Γ

- ✓ It displays the name of communication module installed on the inverter.
- ✓ It displays 'CC-Link' when CC-Link communication module is installed correctly and there is no fault.

(2) Cmd Source (DRV-06)

- \checkmark It sets the run command source of inverter
- ✓ The parameter sets to 'Fieldbus' when it commands Run/Stop operation to inverter by CC-Link communication.

(3) Freq Ref Src (DRV-07)

✓ It sets the frequency command source of inverter.

The parameter sets to 'Fieldbus' when it commands Command frequency by CC-Link communication.

(4) Lost Cmd Mode (PRT-12)

✓ It designates the Run mode when Lost Command is occurred during the time of PRT-13 Lost Cmd Time.

None: It does anything when Lost Command is occurred.

- **FreeRun:** After the status of inverter is changed to Lost Command, motor will free-run to stop and Trip will be occurred.
- **Dec:** After the status of inverter is changed to Lost Command, motor will decelerate to stop and Lost Command Stop will be occurred.
- Hold Input: Running with the last Run command and Lost Command Warning will be occurred.
- **Hold Output:** Running with the current run speed and Lost Command Warning will be occurred.
- Lost Preset: Running with the preset value of PRT-14 and Lost Command Warning will be occurred.

(5) Lost Preset F (PRT-14) – Lost Preset Frequency

✓ When PRT-12 Lost Cmd Mode is set to Lost Preset, inverter will operate with the frequency which is set in Lost Preset F at Lost Preset Frequency occurred.

(6) Lost Cmd Time (PRT-13) – Decision time of Lost Preset Frequency

- ✓ If Preset Frequency is lost for the preset time of PRT-13 Lost Cmd Time, it is recognized to Lost Preset Frequency.
- If the communication is restored within the time of PRT-13 Lost Cmd Time, it is not recognized to Lost Command'



(7) FBus S/W Ver (COM-06)

 \checkmark It displays the version of communication module installed on the inverter.

(8) FBus ID (COM-07) – Station Number setting

- ✓ It sets the Station ID of CC-Link. It can set Station Number from 0 to 64.
- ✓ Station ID can not be duplicated. Check if Station ID is not duplicated.
- ✓ The value of Station ID will be applied to CC-Link option module after Comm Update sets to 'YES'.

$\star \star \star$ Caution

Example of network connection)



- ✓ Same station numbers can not be used more than once in a network.
- ✓ Set the station number sequentially in order of connection. (Do not create a dead station as station 1, station 2, and station 4.)

(9) FBus LED (COM-09) – LED display for On/Off

- ✓ It displays the status information of CC-Link communication.
- ✓ It displays 4 LEDs at COM-0 FBus LED.
- ✓ LED status is displayed at COM-9 FBus LED parameter by keypad. 3 LEDs among 4 LEDs displayed indicates the status of CC-Link communication option module. It displays the information about CPU status, Inverter Interface disconnection and failure of saving the Station ID and Baud Rate to EEPROM in order of from right to left.

Bit	Description	Status	Causes of Status
0	CPU LED	Flicker	Normal communication
1	ERR LED	On or Flicker	Fault has occurred.
2	RUN LED	On	Communication is established.
3	COM LED	On	Data is transmitting and receiving.

Example of COM-09 LED status)



COM LED	RUN LED	ERR LED	CPU LED
OFF	OFF	ON	OFF

(10) Opt Parameter1 (COM-10) – Baud Rate setting

- ✓ It sets the parameter of Baudrate of CC-Link communication. It can be set from 0 (156 Kbps) to 4 (10 Mbps).
- ✓ The value of Baudrate will be applied to CC-Link option module after Comm Update sets to 'YES'.

(11) Para Status-1~8 (COM-31~38)

- ✓ It sets the inverter address to read in Para Status 1~8 when read operation of command code RWw2 of remote register is executed.
- ✓ It describes the method to read the Para Status 1~8 with command code RWw2.
- ✓ Input of the value of RWw2 is described as shown in the figure below. To access to Status, the value of Nibble 3, Nibble 2 and Nibble 1 must be 0.
- ✓ Nibble 0 determines which value of status will be read among Para Status 1~8. If the value of Nibble 0 is 0, it is Para Status-1. If the value of Nibble 0 is 1, it is Para Status-2.
- ✓ For example, If RWw2 sets to 0x0003, the saved value in address which is set in Para Status-4 will be read.



(12) Para Control1~8 (COM-51~58)

- ✓ It sets the inverter address to write in Para Control 1~8 when write operation of command code RWw2 of remote register is executed.
- ✓ It describes the method to write the Para Control 1~8 with command code RWw2.
- \checkmark The value of Nibble 3 must be 1 (Write) to write Control.
- \checkmark The value of Nibble 2 and 1 must be 0.
- ✓ Nibble 0 determines which value of status will be written among Para Control 1~8. If the value of Nibble 0 is 0, it is Para Control-1. If the value of Nibble 0 is 1, it is Para Control-2.
- ✓ For example, If RWw2 sets to 0x1004, the saved value in address RWw3 which is set in Para Status-5 will be written.

(13) Comm Update (COM-94)

- ✓ The value of COM-07 FBus ID and COM-10 Opt Parameter 1 will be applied to CC-Link option module after Comm Update sets to 'YES'.
- ✓ The changed Station ID and communication speed will be applied to CC-Link option module after Comm Update sets to 'YES'.

9. CC-Link Data List

Inverter occupies the buffer memory 1 station of master.

It means the input/output data information between master and inverter.

LS 17

Remote Output Signals (Master unit to Inverter)		Remote Input Signals (Inverter to Master unit)	
Device No.	Signal Function	Device No.	Signal Function
RY0	Forward running command	RX0	Forward running
RY1	Reverse running command	RX1	Reverse running
		RX2	Accelerating
		RX3	Decelerating
		RX4	Reach to preset speed
RY2~8	N/A	RX5	DC Braking
		RX6	N/A
		RX7	Relay1 output terminal
		RX8	Relay2 output terminal
RY9	Output stop	RX9	Q1 output terminal
		RXA	N/A
RIA~D		RXB	N/A
RYC	Monitor command	RXC	Monitoring
RYD	Frequency setting command 1 (RAM)	RXD	Frequency setting completion 1 (RAM)
RYE	Frequency setting command 2 (EEPROM)	RXE	Frequency setting completion 2
RYF	Instruction code execution request	RXF	Instruction code execution completion (EEPROM)
RY10~19	N/A	RX10~19	N/A
RY1A	Error reset request flag	RX1A	Error status flag
RY1B	N/A	RX1B	Available status to run
RY1C~1F	System reservation	RX1C~1F	System reservation

٦

9.1 Details of Remote Input and Output Signals

Remote Output Signals (Master to Inverter)							
Device No.	Signal Function	Description					
RY0	Forward running command	ONForward running startOFFStop command					
RY1	Reverse running command	ONReverse running startOFFStop command					
RY2~8	N/A	_					
RY9	Interrupting of inverter output	When it turns On, motor free-run to stop.					
RYA~B	N/A	_					
RYC	Monitor command	When monitor command (RYC) is switched On, the corresponding monitor value to RWw1 is saved in RWr1. RXC (Monitoring) switches On.					
RYD	Frequency setting command 1 (RAM)	When frequency setting command 1 (RYD) is switched On, command frequency (RWw1) is written to RAM of the inverter. Frequency setting completion 1 (RXD) is turned On after completion of write					
RYE	Frequency setting command 2 (RAM, EEPROM)	When the frequency setting command (RYE) is switched on, the set frequency (RWw1) is written to RAM and EEPROM of the inverter. On completion of write, frequency setting completion (RXD) switches on. The set frequency is remained even if					
RYF	Request for command code execution	It requests the execution of the command code (RWw2). In case command code is Write request, the value of RWw3 is valid					
RY10~19	N/A	-					
RY1A	Inverter Reset	If an inverter has a fault, RY1A is switched On. It makes that the inverter is reset to remove the trip after removing the cause of the fault.					
RY1B	N/A	-					
RY1C~1F	System reservation	-					

9.2 Remote output

Γ

9.3 Remote Input

	Remote Input Signals (Inverter to Master)						
Device No.	Signal Function	Description					
RX0	Forward running command	ONForward runningOFFOther than forward running (during stop or reverse running)					
RX1	Reverse running command	ONReverse runningOFFOther than reverse running (during stop or forward running)					
RX2	Accelerating	Accelerating when it is turned On					
RX3	Decelerating	Decelerating when it is turned On					
RX4	Reach to preset speed	Reach to preset speed when it is turned On					
RX5	N/A	-					
RX6	N/A	-					
RX7	Relay1 output terminal	Terminal output when it is turned On					
RX8	Relay2 output terminal	Terminal output when it is turned On					
RX9	Q1 output terminal	Terminal output when it is turned On					
RXA	N/A	-					
RXB	N/A	-					
RXC	Monitoring	Switched On when monitor data is updating. When the monitor command (RYC) is switched On, the monitor value (RWw0) is set to RWr0 and monitoring (RXC) switches On. Switched Off (RXC) when the monitor command (RYC) is switched Off.					
RXD	Frequency setting completion 1 (RAM)	Switched On (RXD) when the set frequency is written to the inverter by frequency setting switching On (RYD).					
RXE	Frequency setting completion 2 (EEPROM)	Switched On (RXE) when frequency command is written to the inverter by Frequency setting command 2 (RYE) switching ON.					
RXF	Instruction code execution completion	When the instruction code execution request (RYF) is switched on, processing corresponding to					

	Remote Input Signals (Inverter to Master)							
Device	Signal Function	Description						
NO.								
		the instruction code set to RWw2is executed.						
		The instruction code execution completion (RXF)						
		is switched On after completion of execution of						
		instruction code. When an instruction code						
		execution error occurs, a value other than '0' is set						
		in the reply code (RWr2).						
RX10~19	N/A	-						
RX1A	Trip status	It turns On when the trip of inverter has occurred.						
	Available status to	It turns On when the inverter can be available. It						
RX1B		means that the inverter power is supplied stably						
		and there is no fault.						
RX1C~1F	System reservation	-						

Γ

9.4 Remote Register

(Master to Inverter)

Demote			Request
Remote	Name	Description	for
Register			Execution
RWw0	Monitor codeSet the monitor code to be referenced. switching On the monitor command (RYC), the corresponding to monitored da written to RWr0 and Monitoring (R switches On.		RYC
RWw1	Set frequency (0.01 Hz Scale)	Specify the set frequency. At this time, when Frequency setting command 1 (RYD) is switched On, it is stored in RAM of the inverter. When Frequency setting command 2 (RYE) is switched On, it is stored in EEPROM that it can save the set frequency even if power is switched Off and then On. To command the frequency through communication, Ref Freq Src of DRV-07 must be set to 'Fieldbus'.	RYD RYE
RWw2	Command code	Set the command code for execution of read/ write/ error history/ error reset, etc. of parameter. The corresponding process to command code (RWw2) is executed by switching On command code execution request flag (RYF) after completion of command code (RWw2) setting. Command code execution completion flag (RXF) switches On after completion of command execution. When command code is Write, the data of Write set in RWw3. Command code execution request flag (RYF)	RYF
RWw3 Write data		switches On after setting of Write data and command code.	

Г

Remote register	Name	Description	Request for execution
		Monitor value specified to the upper Byte of	
RWr0	Monitor data	RWw0 of monitor code is set in RWr0 and	RYC
		Monitoring (RXC) switches On.	
D\Wr1	Output		DVN DVE
RVVII	frequency	-	RIDRIL
		When Command code (RWw2) and Write	
D\\/r2	Reply code	data (RWw3) is normal, 0x00 is set in reply	
RVVIZ		code (RWr2). If not, the value from 0x01 to	DVE
		0x03 is set in replay code.	
D\\/r2	Pood data	When command code (RWw2) is Read, the	
RWr3	Reau uata	corresponding read data is set.	

9.5 Monitor code

Instance ID	Obje	ct Name	Linit
Instance ID	Upper 1Byte	Lower 1Byte	Unit
0x00	Not monitor		0.01 Hz
0x01	Output frequen	су	0.01 Hz
0x02	Output current		0.01 A
0x03	Output voltage		1V
0x04	N/A		
0x05	Preset frequen	су	0.01Hz
0x06	Run speed		1 rpm
0x07	Motor output to	rque	0.1%
0x08	DC Link voltage	е	0.1 V
0x09~0x0C	N/A		
0x0D	Output power		0.1kW
0x0E	Output electric	power	0.01kW
0x0F	Status of input	terminal	Note1)
0x10	Status of outpu	t terminal	Note2)
0x11~0x15	N/A		
0x16	Run status of ir	verter	Note3)
0x17	Run time of inv	erter	Hour

٦

Note1) Bit information of input terminal

RWr3

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
_	_	_	_	_	P11	P10	P9	P8	Ρ7	P6	P5	P4	P3	P2	P1

When status of each input terminal is turned On, the value is 1.

When status of each input terminal is turned Off, the value is 0.

Note2) Bit information of output terminal

RWr3

Γ

15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
_	_	_	_	_	_	_	_	_	_	Q4	Q3	Q2	Q1	R2	R1

When status of each output terminal is turned On, the value is 1.

When status of each output terminal is turned Off, the value is 0.

R1 means Relay1 and R2 means Relay2.

Note3) Bit information of inverter run status

B15	0 : Normal status
B14	4 : Warning occurrence
B13	8 : Fault occurrence
B12	(It operates according to the value of PRT-30 Trip Out Mode.)
B11	
B10	
B9	-
B8	
B7	1 : Speed Searching 2 : Accelerating
B6	3 : Constant speed 4 : Decelerating
B5	5 : Deceleration to stop 6 : H/W OCS
B4	7 : S/W OCS 8 : Dwell operation
B3	0 : Stop
B2	1 : Forward running
B1	2 : Reverse running
B0	3 : DC operation (Zero speed control)

9.6 Command code

It sets the command code at remote register. It saves the executed value in remote register RWr after execution of read command code.

< RWw2 >

 3
 2
 1
 0
 (Nibble, 4Bit)

 0~7 (Status/Control Number)

 0

 0

 0

 0

 1<: Write</td>

Command code is divided in 2 kinds.

First command code, It reads the data from the address set in COM-31~38 Para Status 1~8 by setting 0x0000 ~ 0x0007 in RWw2.

Second command code, It writes the RWw3 data to the address set in COM-51~58 Para Control 1~8 by setting 0x1000~0x1007 in RWw3.

9.7 Response Code

Γ

It sets the response for monitor code and command code to RWr2.

Error	Description	Cause					
Code	Boschphon						
0×00	Normal	It means that the code from master is executed					
0,00	Normai	correctly.					
0×01	Insertion mode error	It means that the inserted value is not valid at Monitor					
0701		code RWw0 and command code RWw2.					
0,02	Abnormal command	It means that the inserted address value is not valid at					
0x02	code	COM-31~37 Status 1~8 or COM-51~58 Control 1~8.					
0x03	Range error of the data	It means that the inserted value exceeds the range of					
0x03	written	data written.					

Warranty

9

Maker	L	.SIS Co., Ltd.	Installation (Start-up)	
			Date	
Madal Na	SV (S7 C	C Link Ontion Board	Warranty	
woder No.	SV-IS7 CC-LINK Option Board		Period	
	Name			
Customer	Address			
	Tel.			
	Name			
Sales Office (Distributor)	Address			
	Tel.			

Warranty period is 12 months after installation or 18 months after manufactured when the installation date is unidentified. However, the guarantee term may vary on the sales term.

IN-WARRANTY service information

If the defective part has been identified under normal and proper use within the guarantee term, contact your local authorized LS distributor or LS Service center.

OUT-OF WARRANTY service information

The guarantee will not apply in the following cases, even if the guarantee term has not expired.

- Damage was caused by misuse, negligence or accident.
- Damage was caused by abnormal voltage and peripheral devices' malfunction (failure).
- Damage was caused by an earthquake, fire, flooding, lightning, or other natural calamities.
- When LS nameplate is not attached.
- When the warranty period has expired.



LS values every single customer. Quality and service come first at LSIS. Always at your service, standing for our customers.

www.lsis.biz



10310001206

HEAD OFFICE ■ LSIS Tokyo Office >> Tokyo, Japan Address: LS tower, 1026-6, Hogye-dong, Dongan-gu, Anyang-si, Address: 16th FL., Higashi-Kan, Akasaka Twin Tower 17-22, 2-chome, Akasaka, Gyeonggi-do 431-848, Korea Minato-ku, Tokyo 107-8470, Japan http://eng.lsis.biz ■ LSIS Europe B.V >> Amsterdam, Netherland Tel: 81-3-3582-9128 Fax: 81-3-3582-2667 e-mail: jschuna@lsis.biz Address: 1st FL., Tupolevlaan 48, 1119NZ Schiphol-Rijk, The Netherlands LSIS Shanghai Office >> Shanghai, China Tel: 31-20-654-1420 Fax: 31-20-654-1429 e-mail: junshickp@lsis.biz Address: Room E-G, 12th FL., Huamin Empire Plaza, No. 726, West Yan'an Road, ■ LSIS (Middle East) FZE Office >> Dubai, UAE Shanghai 200050, China Tel: 86-21-5237-9977 (609), FAX: 89-21-5237-7191 e-mail: jinhk@lsis.com.cn Address: LOB 19 Jafza View Tower Room 205, Jebel Ali Free Zone, P.O.Box 114216, Dubai, UAE, LSIS Beijing Office >> Beijing, China Tel: 971-4-886-5360 Fax: 971-4-886-5361 e-mail: jungyongl@lsis.biz Address: B-tower 17th FL., Beijing Global Trade Center B/D, No.36, Dalian LSIS Co., Ltd, >> Dalian, China BeiSanHuanDong-Lu, DongCheng-District, Beijing 100013, China Tel: 86-10-5825-6025, 7 Fax: 86-10-5825-6026 e-mail: cuixiaorong@lsis.com.cn Address: No. 15 Liaohexi 3-Road, Economic and Technical Development ■ LSIS Guangzhou Office >> Guangzhou, China Zone Dalian 116600 China Tel: 86-411-8273-7777 Fax: 86-411-8730-7560 e-mail: lixk@lsis.com.cn Address: Room 1403, 14th FL., New Poly Tower, 2 Zhongshan Liu Road, LSIS Wuxi Co., Ltd. >> Wuxi, China Guangzhou, China Address: 102-A National High & New Tech Industrial Development Area, Tel: 86-20-8326-6764 Fax: 86-20-8326-6287 e-mail: linsz@lsis.biz Wuxi, Jiangsu 214028, China ■ LSIS Chengdu Office >> Chengdu, China Tel: 86-510-8534-6666 Fax: 86-510-522-4078 e-mail: xuhg@lsis.com.cn Address: 12th FL., Guodong Building, No.52 Jindun Road, Chengdu, 610041, P.R. China LSIS-VINA Co., Ltd. >> Hanoi, Vietnam Fax: 86-28-8612-9236 e-mail: yangcf@lsis.com.cn Address: Nguyen Khe, Dong Anh, Ha Noi, Vietnam Tel: 86-28-8612-9151 Tel: 84-4-882-0222 Fax: 84-4-882-0220 e-mail: srjo@lsisvina.com LSIS Qingdao Office >> Qingdao, China LSIS-VINA Co., Ltd. >> Hochiminh, Vietnam Address: 7B40, Haixin Guangchang Shenye B/D B, No.9, Shandong Road, Address: 41 Nguyen Thi Minh Khai Str. Yoco Bldg 4th FL., Qingdao 26600, China Hochiminh City, Vietnam Tel: 86-532-8501-6568 Fax: 86-532-583-3793 e-mail: lirj@lsis.com.cn Fax: 84-4-3822-7942 e-mail: sbpark@lsisvina.com Tel: 84-8-3822-7941

SV-iS7 CC-Link Option /2011.04

* LSIS constantly endeavors to improve its product so that Information in this manual is subject to change without notice.