


DATA SHEET

LG Programmable Logic Controller Analog to Digital Conversion Module GLOFA G3F-AD3A G4F-AD3A

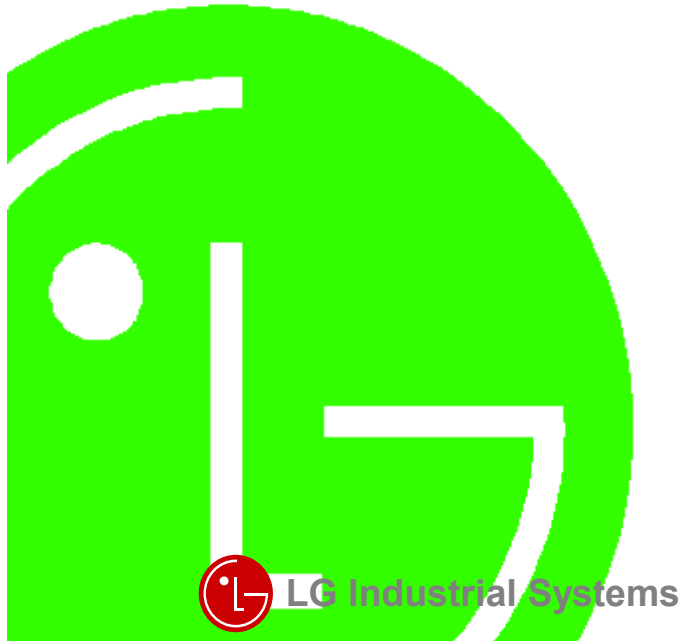

Before handling the product

Read this data sheet carefully prior to any operation, mounting, installation or start-up of the product.

Materials for GLOFA GM

Name	Code
GLOFA GMWIN (Programming Software)	702005047
GLOFA GM (Instruction & programming)	702005058
GLOFA-GM3/4	702004919
GLOFA G3F-AD3A/G4F-AD3A	702005785

Name	GLOFA G3F-AD3A/G4F-AD3A Data sheet
Code	702005741

Safety Precautions

Be sure to read carefully the safety precautions given in data sheet and user's manual before operating the module and follow them. The precautions explained here only apply to the G3F-AD3A/G4F-AD3A. For safety precautions on the PLC system, see the GLOFA GM3/4 User's Manuals.

A precaution is given with a hazard alert triangular symbol to call your attention, and precautions are represented as follows according to the degree of hazard.



WARNING

If not provided with proper prevention, it can cause death, fatal injury or considerable loss of property.




CAUTION

If not properly observed, it can cause a hazard situation to result in severe or slight injury or a loss of property.

However, a precaution followed with **CAUTION** can also result in serious conditions.

Both of two symbols indicate that an important content is mentioned, therefore, be sure to observe it. Keep this manual handy for your quick reference in necessary.


Design Precautions



CAUTION

- ▶ Do not run I/O signal lines near to high voltage line or power line. Separate them as 100 mm or more as possible.
- Otherwise, noise can cause module malfunction.


Installation Precautions



CAUTION

- ▶ Operate the PLC in the environment conditions given in the general specifications.
- ▶ If operated in other environment not specified in the general specifications, it can cause an electric shock, a fire, malfunction or damage or degradation of the module.
- ▶ Make sure the module fixing projections is inserted into the module fixing hole and fixed.
- ▶ Improper installation of the module can cause malfunction, disorder or falling.

Wiring Precautions



CAUTION

- ▶ When grounding a FG terminal, be sure to provide class 3 grounding which is dedicated to the PLC.
- ▶ Before the PLC wiring, be sure to check the rated voltage and terminal arrangement for the module and observe them correctly.
 - If a different power, not of the rated voltage, is applied or wrong wiring is provided, it can cause a fire or disorder of the nodule.
- ▶ Drive the terminal screws firmly to the defined torque.
 - If loosely driven, it can cause short circuit, a fire or malfunction.
- ▶ Be careful that any foreign matter like wire scraps should not enter into the module.
 - It can cause a fire, disorder or malfunction.

Test RUN and Maintenance Precautions



WARNING


- ▶ Do not contact the terminals while the power is applied. It can cause malfunction.
- ▶ When cleaning or driving a terminal screw, perform them after the power has been turned off.
- ▶ Do not perform works while the power is applied, which can cause disorder or malfunction.



CAUTION

- ▶ Do not separate the module from the printed circuit board(PCB), or do not remodel the module.
 - They can cause disorder, malfunction, damage of the module or a fire.
- When mounting or dismounting the module, perform them after the power has been turned off.
- ▶ Do not perform works while the power is applied, which can cause disorder or malfunction.

Waste Disposal Precautions



CAUTION

- ▶ When disposing the module, do it as an industrial waste.

1. Introduction

The G3F-AD3A/G4F-AD3A is analog/digital conversion module for use with the GLOFA PLC GM3/4 series CPU module. The A/D conversion module is to convert an analog input signal (voltage or current) from external sensors into a 12-bit signed Binary digital value.

2. General Specifications

No	Item	Specifications	Standard
1	Operating temperature	0 ~ 55 ℃	
2	Storage temperature	-25 ~ 70 ℃	
3	Operating Humidity	5 ~ 95%RH, non-condensing	
4	Storage humidity	5 ~ 95%RH, non-condensing	
5	Vibration	Occasional vibration Frequency Acceleration Amplitude Sweep count 10≤ f < 57 Hz - 0.075 mm 57 ≤ f ≤ 150 Hz 9.8ms ⁻² {1G} - Continuous vibration Frequency Acceleration Amplitude 10≤ f < 57 Hz - 0.035 mm 57≤ f ≤ 150 Hz 4.9ms ⁻² {0.5G} - 10 times in each direction for X, Y, Z	IEC 1131-2
6	Shocks	*Maximum shock acceleration: 147ms ⁻² {15G} *Duration time :11 ms *Pulse wave: half sine wave pulse(3 times in each of X, Y and Z directions)	IEC 1131-2
7	Noise immunity	Square wave impulse noise ± 1,500 V Electrostatic discharge Voltage :4kV(contact discharge) Radiated electromagnetic field 27 ~ 500 MHz, 10 V/m Fast transient & burst noise Severity Level All power modules Digital I/Os (Ue < 24 V) Digital I/Os (Ue ≥ 24 V) Analog I/Os communication I/Os Voltage 2 kV 1 kV 0.25 kV	LGIS Standard IEC 1131-2 IEC 801-2 IEC 1131-2 IEC 801-3 IEC 1131-2 IEC 801-4
8	Atmosphere	Free from corrosive gases and excessive dust	
9	Altitude for use	Up to 2,000m	
10	Pollution degree	2 or lower	
11	Cooling method	Self-cooling	

3. Performance Specifications

Items	Specifications
input	Voltage 1 ~ 5 VDC (input resistance 600k Ω) 0 ~ 10VDC(input resistance 600k Ω) Current DC 4 ~ 20 mA (input resistance 250 Ω) Voltage/Current selection *. Adjust input selection switch for each channel on side of module. (ON:Current, OFF:Voltage) *. Selection of voltage range by program.
Digital output	*. 16-bit (data: 12bit)signed binary(-48 ~ 4047, -2048 ~ 2047) *. Digital Output value is selected by program
Maximum resolution	1 ~ 5 VDC 1 mV (1/4000) 0 ~ 10VDC 2.5mV(1/4000) DC 4 ~ 20 mA 4 μ A (1/4000)
Overall Accuracy(%)	± 0.5% or lower (accuracy to full scale)
Maximum conversion speed (ms/channel)	5.0
Maximum absolute input	Voltage(V):15, Current (mA):25
Number of analog input point	8 channels/module
Isolation	Between input terminals and PLC: Photo coupler isolation (Between channels : Non-isolated)
Terminals connected	20-point terminal block
Internal current consumption(A)	0.5A
Weight (g)	280g



CAUTION

The adjusted value of A/D conversion module at manufacturer has been in the range of from 4 to 20 mA DC, and in accordance with it, offset / gain values is fixed.

Beijing Branch LG Industrial Systems Elevator Co., Ltd. T : +86-10-6462-3256 F : +86-10-6462-3255	Bangkok Branch LG Industrial Systems (Thailand) Co., Ltd T : +66-2-381-8443 F : +66-2-381-8445
Bogota Branch LG Industrial Systems de Colombia S.A. T : +57-1-310-6077 F : +57-1-310-5831	Chicago Branch LG Industrial Systems Co., Ltd. Chicago Office T : +1-708-692-4500 F : +1-708-692-4501
Dalian Branch Dalian LG Industrial Systems Co., Ltd. T : +86-411-281-2579 F : +86-411-281-2578	Hanoi Branch LG Industrial Systems Co., Ltd. Hanoi Office T : +64-4-821-0388 F : +64-4-821-0399
Hong Kong Branch LG Industrial Systems (HK) Ltd. T : +852-2598-6615 F : +852-2598-7105	Shanghai Branch Shanghai LG Industrial Systems Co., Ltd. T : +86-21-6248-2710 F : +86-216248-3236
Singapore Branch LG Industrial Systems Co., Ltd. T : +65-323-7361 F : +65-323-7362	Taipei Branch LG Industrial Systems (Taiwan) Co. Ltd. T : +886-2-516-5010 F : +886-2-516-5035
Tokyo Branch LG Industrial Systems Co., Ltd. Tokyo Office T : +81-3-3589-6362 F : +81-3-3588-1810	

LG Industrial Systems Co., Ltd.

- Head Office**
LG Mullae Building 9th F, 10, Mullae-dong 6-ga, Yongdungpo-gu, Seoul, KOREA
Tel : +82-2-2006-3751~6 Fax : +82-2-2006-3951
Home page : <http://www.lgis.lg.co.kr/fa>

This following shows the names of parts and functions of G4F-AD3A module.

1) G3F-AD3A

From unpacking to installation, be sure to check the following:

- 1) Do not drop it off, and make sure that strong impacts should not be applied.
- 2) Do not dismount printed circuit boards from the case. It can cause malfunctions.
- 3) During wiring, be sure to check any foreign matter like wire scraps should not enter into the upper side of the PLC, and in the event that foreign matter entered into it, always eliminate it.
- 4) Be sure to disconnect electrical power before mounting or dismantling the module.

6.1 Wiring Precaution

- 1) Separate AC and external input signal of A/D conversion module wiring not to be affected by surge or induced noise in the AC.
- 2) External wiring has to be at least AWG22(0.3 mm²) and be selected in consideration of operating ambience and/or allowable current.
- 3) Separate wiring from devices and/or substances generating intense heat, and oil not to make short-circuit which leads to damage and/or misoperation.
- 4) Identify the polarity of terminal block before external power supply is made connected.
- 5) Separate external wiring sufficiently from high voltage and power supply cable not to cause induced failure and/or malfunction.

6.2 Wiring example

1) Voltage Input


2) Current Input

2)G4F-AD3A

O	Description
①	<div>RUN LED</div>
	Indicates the operating status of the G4F-AD3A.
②	<div>Selection Switch of Voltage/Current</div>
	1)The swtich status at voltage selection 2)The swtich status at current selection

*1 For the cable, use a two-core twisted shielded wire.
*2 If noise is expected, this has to be grounded.

1) G3F-AD3A (Unit : mm)

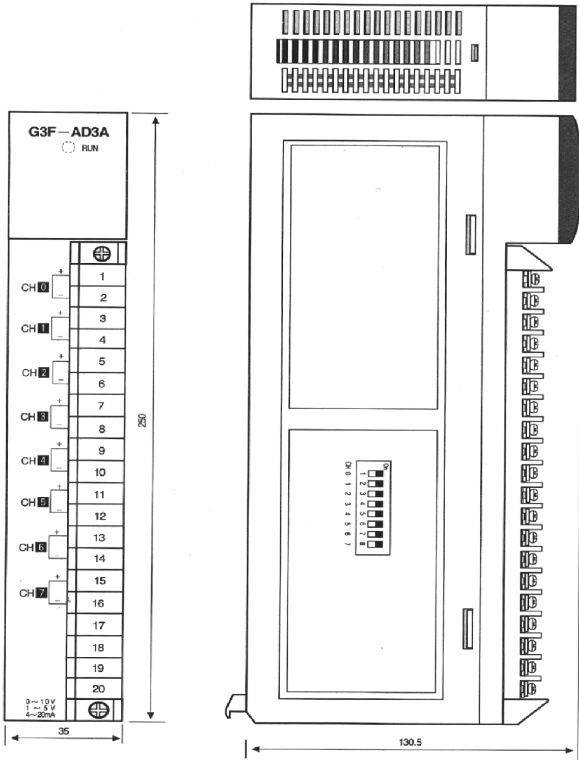

2)G4F-AD3A